


Quick Reference Guide

Using Your Front-Loading Washer

NOTE: See your Use and Care Guide for more information. Not all settings and options are available on each cycle.

WARNING



Fire Hazard


Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

1 TOUCH POWER TO TURN ON WASHER



BEFORE FIRST USE:

2 RUN WASH CYCLE WITHOUT LAUNDRY

Before washing clothes for the first time, choose the Quick cycle and run it without clothes. This initial cycle serves to ensure the interior is clean before washing clothes.

DOING LAUNDRY:

3 ADD LAUNDRY PRODUCTS, IF DESIRED




Single-dose laundry packets, Oxi-type boosters, color-safe bleach, or scented crystals can be added to the drum prior to adding laundry.


4 LOAD LAUNDRY

Place a load of sorted items loosely in the washer.

IMPORTANT: Push load fully into the washer. Make sure no items are resting on the rubber seal to avoid trapping them between the seal and the door window.

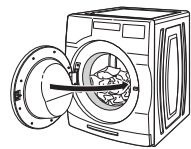


5 ADD THE DETERGENT, IF DESIRED

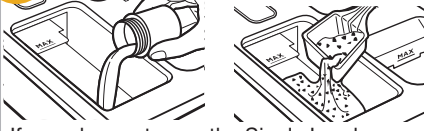

If you choose to use the Single Load Dispenser, add detergent to the appropriate compartment at this time.

6 ADD LIQUID FABRIC SOFTENER AND CHLORINE BLEACH TO SINGLE LOAD DISPENSER, IF DESIRED

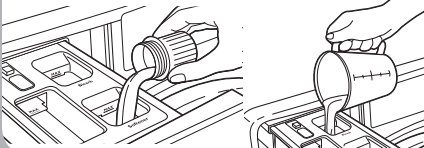

7 SELECT A CYCLE

REGULAR	DELICATES	BULKY ITEMS	WHITES	COLORS	TOWELS
NORMAL	WRINKLE CONTROL	HEAVY DUTY	SANITIZE with OXI	COLD WASH	QUICK

8 ADJUST CYCLE MODIFIERS, IF DESIRED

• • • • Temp
Cold Hot

• • • • Spin
Off Fast

• • • Soil
Light Heavy

9 SELECT ANY ADDITIONAL OPTIONS

• • • • •

Clean Washer	Drain & Spin	Cycle Signal	Extra Rinse	Pre Soak
--------------	--------------	--------------	-------------	----------


with **aFresh** Hold 3 sec for Control Lock

Additional options available:

- Cycle Signal
- Extra Rinse
- Pre-Soak

10 TOUCH AND HOLD START TO BEGIN WASH CYCLE

Touch and hold START for 3 seconds to start the wash cycle. To add 1-2 additional garments, pause the cycle by Touching START once to add garments; then touch and hold START again to continue the cycle. To cancel a cycle, touch and hold POWER.



MAINTENANCE

- Run Clean Washer cycle every 30 loads. The washer will also give you a reminder.
- Leave door open for ventilation when machine is not in use.
- Check door seal between cycles. Clean out small items and/or debris if present.

What to Wash

REGULAR	DELICATES	BULKY ITEMS	WHITES	COLORS	TOWELS
NORMAL	WRINKLE CONTROL	HEAVY DUTY	SANITIZE with OXI	COLD WASH	QUICK

How to Wash

Power Button **Start Button**

Cycle Status Display **Cycle Modifiers**

Sensing Washing

0:00

Add Garment Detergent Low

• • • • Temp
Cold Hot

• • • • Spin
Off Fast

• • • Soil
Light Heavy

• • • • •

Clean Washer	Drain & Spin	Cycle Signal	Extra Rinse	Pre Soak
--------------	--------------	--------------	-------------	----------

with **aFresh** Hold 3 sec for Control Lock

Guide de référence rapide

Utilisation de la laveuse à chargement par l'avant

REMARQUE : Consulter le Guide d'utilisation et d'entretien pour plus d'informations. Les réglages et les options ne sont pas tous disponibles sur chaque programme.

AVERTISSEMENT



Risque d'incendie

Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Aucune laveuse ne peut complètement enlever l'huile.

Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.

What to Wash (articles à laver)

REGULAR	DELICATES	BULKY ITEMS	WHITES	COLORS	TOWELS
NORMAL	WRINKLE CONTROL	HEAVY DUTY	SANITIZE WITH OXI	COLD WASH	QUICK

Bouton de mise sous/hors tension How to Wash (méthode de lavage) Bouton Start (mise en marche)

Affichage de l'état du programme

Modificateurs de programme

The diagram shows the control panel with a digital display showing '0:20'. Below the display are buttons for 'Add Garment' and 'Detergent Low'. To the right are buttons for 'Temp', 'Spin', and 'Soil', each with a dot matrix indicator. Below these are buttons for 'Clean Washer', 'Drain & Spin', 'Cycle Signal', 'Extra Rinse', and 'Pre Soak'. A note at the bottom says 'Hold 3 sec for Control Lock'.

Options

W11219947A ©/™ ©2018 Whirlpool. Tous droits réservés. Utilisé sous licence au Canada.
W11219997A - SP

1 TOUCHER LE BOUTON POWER POUR METTRE EN MARCHÉ LA LAVEUSE



AVANT LA PREMIÈRE UTILISATION :

2 EXÉCUTER LE PROGRAMME DE LAVAGE SANS VÊTEMENTS

Avant de laver les vêtements pour la première fois, choisir le programme rapide et l'exécuter sans linge. Ce programme préalable sert à garantir que l'intérieur est propre avant de laver des vêtements.

FAIRE LA LESSIVE :

3 AJOUTER LES PRODUITS DE LESSIVE SI DÉSIRÉ




On peut ajouter des sachets de lessive à dose unique, des activateurs de lessive de type Oxi, de l'agent de blanchiment sans danger pour les couleurs ou des cristaux parfumés dans le tambour avant d'ajouter le linge.

4 AJOUTER LE LINGE

Placer une charge de linge trié dans la laveuse sans les tasser. **IMPORTANT :** Pousser entièrement la charge dans la laveuse. S'assurer qu'aucun article ne se trouve sur le joint en caoutchouc pour éviter de le coincer entre le joint et la porte de fenêtre.




5 AJOUTER LE DÉTERGENT HE SI DÉSIRÉ

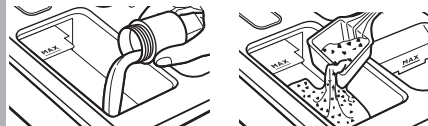

Si vous choisissez d'utiliser le distributeur pour charge unique, ajouter du détergent dans le compartiment approprié à ce moment.

6 VERSER DE L'ASSOUPLISSANT LIQUIDE POUR TISSU ET DE L'EAU DE JAVEL DANS LE DISTRIBUTEUR POUR CHARGE UNIQUE SI DÉSIRÉ

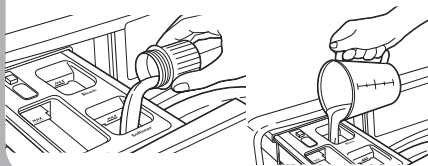

7 SÉLECTIONNER UN PROGRAMME

REGULAR	DELICATES	BULKY ITEMS	WHITES	COLORS	TOWELS
NORMAL	WRINKLE CONTROL	HEAVY DUTY	SANITIZE WITH OXI	COLD WASH	QUICK

8 AJUSTER LES MODIFICATEURS DE PROGRAMME SI DÉSIRÉ

The diagram shows three buttons: 'Temp', 'Spin', and 'Soil'. Each button has a dot matrix indicator. For 'Temp', the dots are set to 'Cold' and 'Hot'. For 'Spin', the dots are set to 'Off' and 'Fast'. For 'Soil', the dots are set to 'Light' and 'Heavy'.

9 SÉLECTIONNER TOUTE OPTION SUPPLÉMENTAIRE

Clean Washer	Drain & Spin	Cycle Signal	Extra Rinse	Pre Soak
--------------	--------------	--------------	-------------	----------

with **afresh** Hold 3 sec for Control Lock

Autres options disponibles :

- Cycle Signal (signal de programme)
- Extra Rinse (rinçage supplémentaire)
- Pre-Soak (pré-trempe)

10 APPUYER SANS RELÂCHER SUR START (MISE EN MARCHÉ) POUR DÉMARRER LE PROGRAMME DE LAVAGE

Toucher le bouton START (mise en marche) pendant 3 secondes pour démarrer le programme de lavage. Pour ajouter un ou deux vêtements supplémentaires, mettre le programme en pause en appuyant une fois sur START (mise en marche) pour ajouter des vêtements ; puis appuyer de nouveau sur START pour poursuivre le programme. Pour annuler un programme, maintenir enfoncé le bouton d'alimentation.



ENTRETIEN

- Exécuter le programme Clean Washer (nettoyage de la laveuse) toutes les 30 charges. La laveuse effectue aussi un rappel.
- Laisser la porte ouverte pour la ventilation lorsque la machine n'est pas utilisée.
- Vérifiez le joint de la porte entre les programmes. Enlever les petits objets et/ou débris s'ils sont présents.